


CCTC

ANODIC VOLTAGE DISTRIBUTION
MEASUREMENT STICK

DIMENSIONS

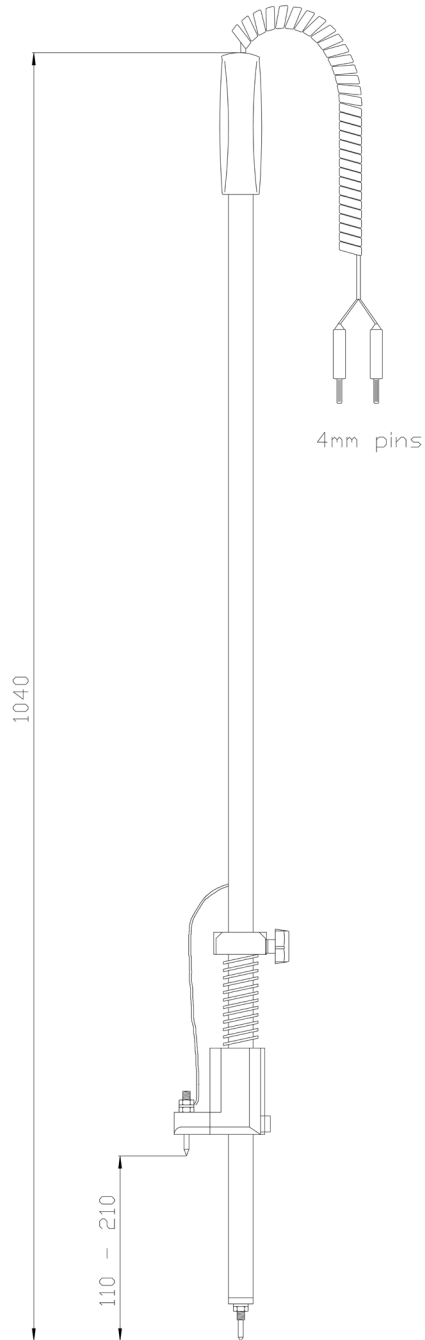

UTILISATION

- Connect the pins to a VMRA millivoltmeter
- Position the movable tip on the anode stem under the connector and press until the fixed tip is in contact with the anode frame
- Take the voltage reading from the millivoltmeter

